

## Sanisailor Pump-Out Instructions

1. Make sure pump-out hose is connected to plumbing at the pump or at the bottom of the stanchion and that all cam-locks are secure. Keep suction hose ball valve shut while stanchion is not in operation.
2. Place universal suction nozzle into sewage outlet on boat. If threaded deck fittings are preferred, install deck into sewage outlet on boat and secure cam-lock nozzle assembly.
3. Open ball valve on suction hose.
4. Start system.
5. Pump out boat until no sewage is visible in the site glass on instake hose Let air run through pump for 30 seconds.
6. While pump is running, pump 5-10 gallons of fresh water from a designated bucket through system to clear suction lines.
7. Shut system off.
8. Close ball valve on the suction hose and hand on hose hanger.